


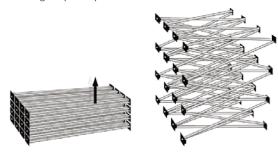

Place the Express display frame on the ground and pull straight up to expand.



Connect magnetic fasteners to hold the expanded Express display frame in place.



Attach magnetic fastener locks to prevent unintended collapsing of frame.



Attach fabric graphic flags by fitting button holes over pins.





IMPORTANT

Remove magnetic fastener locks before attempting to collapse the Express frame. Failure to do so will damage the frame.