




ROLL UP \$10


Ol Rotate the support foot 90° (perpendicular) to the Roll Up S10's base.



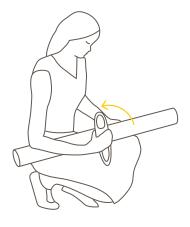

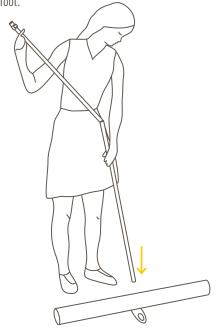

O3 Pull the graphic panel out of the base and insert the top of the pole into the slot on the back of the top profile bar. Pull up the telescopic pole section and lock in place at the last mark (last mark after B)

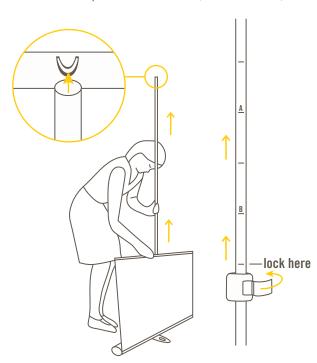

04 Assembly is complete.

