


XFOOT \$10

01 Unfold the pole and connect it to the base.




O3 Attach the pole clip to the bottom snap profile.

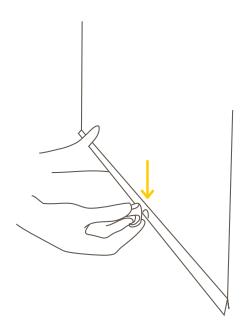

Insert the top connector on the pole to the slot of the top snap profile.

Then pull up the telescopic pole to the desired height following the mark on the pole.

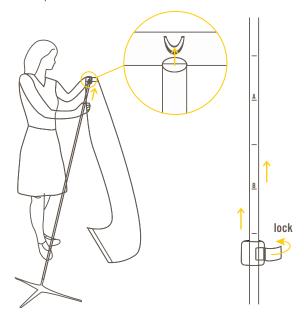

O4 Connect the bottom snap profile to the pole by pushing the pole clip against the pole. Assembly is complete

